 
 





# ZTW UBEC 5V/2A UBEC 12V/1A

## 说明书



- ① SHDN: 低于1.2V时自动关闭BEC输出  
高于1.5V时自动激活BEC输出
- ② VIH: 电源正极
- ③ GND: 电源负极 (BEC地线)
- ④ VOUT: BEC输出

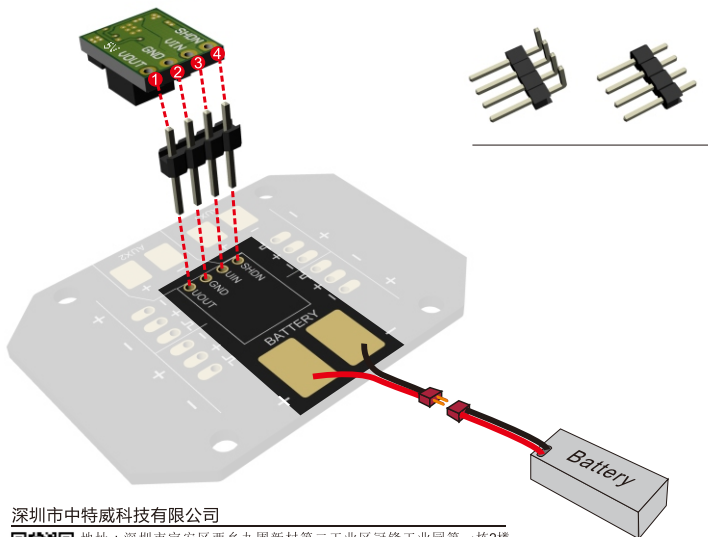

深圳市中特威科技有限公司

 
 


地址：深圳市宝安区西乡九围新村第二工业区冠峰工业园第一栋2楼  
 电话：+86 755 29120026, 29120036, 29120056  
 传真：+86 755 29120016  
 邮箱：marketing@ztwoem.com




# ZTW UBEC 5V/2A UBEC 12V/1A

## Manual Instruction



- ① SHDN: Under 1.2V, turn off BEC output automatically  
Under 1.5V, enable BEC output automatically
- ② VIH: Input Voltage
- ③ GND: Power ground
- ④ VOUT: BEC output Voltage

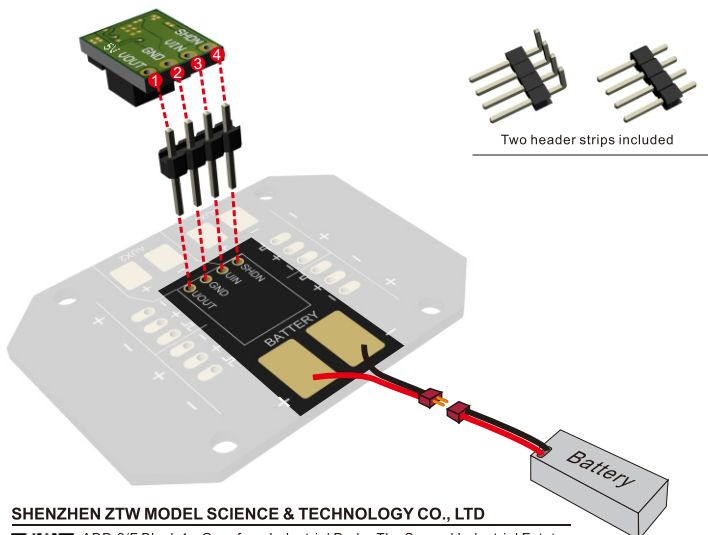

SHENZHEN ZTW MODEL SCIENCE & TECHNOLOGY CO., LTD



ADD: 2/F, Block 1, Guanfeng Industrial Park, The Second Industrial Estate,  
 Jiuwei New Village, Xixiang, Baoan, Shenzhen, China, 518126  
 TEL: +86 755 29120026, 29120036, 29120056  
 FAX: +86 755 29120016 E-mail: sales@ztwoem.com support@ztwoem.com